

Smart Case Fan Blue LED >>>

>>> Application for PC and CPU Fan

AI Function 1 :

Full Speed :

Leave the jumper in it's original position and make sure the speed control device is not connected (Photo 1).

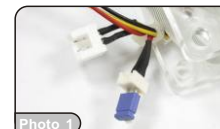


Photo 1

AI Function 2 :

Temperature control function :

Temperature detector from 20 C to 55 C.

- Secure the sensor with the thermal tape included.

Note: 1. For K7 cooler, place the sensor underneath the processor.

You may bend the sensor for better fit (Photo 2).

2. For P4 & K8 cooler, we suggest to tape the sensor underside of CPU heatsink (Photo 3).

- Remove the jumper and attach the temperature sensor connector (Photo 4).

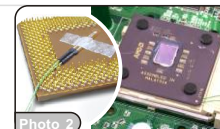


Photo 2

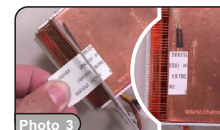


Photo 3

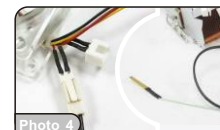


Photo 4

AI Function 3 :

Manual speed control function :

- Remove the jumper and attach the speed control connector (Photo 5).
- Replace the fan speed controller to free PCI slot by the screw included.



Photo 5

Note :

- The direction of the airflow is as the arrow on the side of the fan.
- Avoid excessive pressure to the sensor !